

YP PROTAINER® YP Procorner A Instruction Manual


Safety and General Precautions

Users of the YP PROTAINER® must observe the following precautions and safe handling ; practices.

- Pay special attention to safety measures (hard hat, safety goggles, protective glove, safe shoes) and only trained and authorized personnel are to handle the YP PROTAINER®.
- Do not stack the cargos in an unstable condtion.Take masures to prevent the cargos to collapse.
- We strongly recommend to always use polyester bands when handling cargo with the YP PROTAINER®.
- YP PROTAINER® is designed for one way use not for reuse purpose. Always inspect YP PROTAINER® before use, do not use damaged YP PROTAINER®.
- YP PROTAINER® are made of polypropylene. Do not place YP PROTAINER® near flame or in areas of temperatures over 100°C. Do not use volatile solvents like benzine and thinner and chemical duster.
- YP PROTAINER® should be stored in a dry, clean warehouse environment. Do not store temperatures below 0°C.
- Do not give strong shock to YP PROTAINER® with a hammer. Do not push the corrugated cardboard box by forklift.
- Do not throw the tray with YP PROTAINER® violently.
- Once the YP PROTAINER® gets uninstalled, the adherent properties of the hotmelt glue will decrease noticeably so please be cautious.
- It is very important that you distribute the cargo evenly so each YP PROTAINER® supports the same amount of weight.
- Make sure you use bubble wrap in between the upper side cap and the cargo inside so there are no gaps left.
- If by any chance a polyester band gets off while on the job, please make sure you put it back in place.
- YP PROTAINER® should be used within 6 months after purchase.

YP Procorner A (Made of polypropylene)



A unit weights 320g

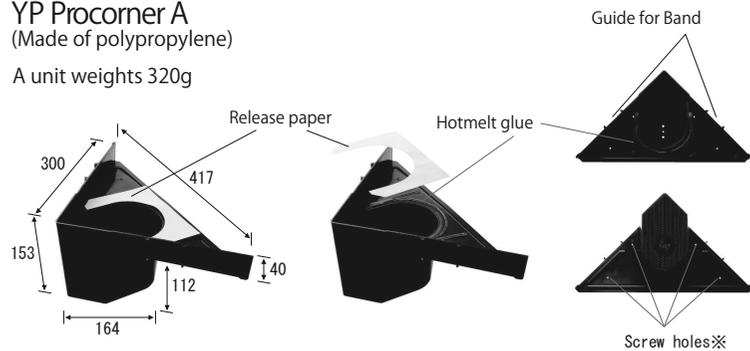


※ M4 pan head screws are recommended according to the thickness of the plywood.

How to Use YP Procorner A

- 1** Peel off the release paper. The hotmelt glue has been applied on the surface but remember it is only for a temporary fixing.
- 2** We will press the YP Procorner A firmly against the corrugated cardboard tray to stick them both together.

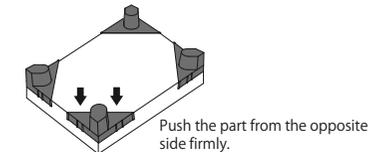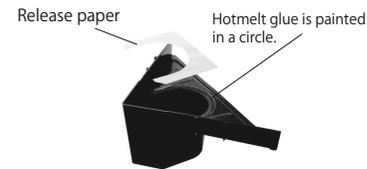

- 3** Securely tighten by the polyester strapping bands. The use of the PP bands are not recommended since it may loosen during transportation.
- 4** To safety handle the cargo by a forklift, pay special attention not to damage it and ensure that the cargo should be protected from collapsing.

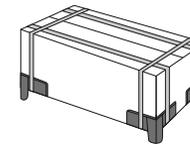

In case the polyester band is broken

- 1** If by any chance a band gets off while on the job, please make sure you put it back in place.
- 2** Please detach the band if it gets cut off.
- 3** Once the YP Procorner A gets uninstalled, the adherent properties of the hotmelt glue will decrease noticeably so please be cautious.
- 4** Set the polyester band on the outer side of the legs and fasten it with a binding tool.
- 5** If you don't have a polyester band, you can use a polypropylene band instead.



YP PROTAINER® WEB SITE
<https://www.ypcjp.com/>



YP PROTAINER® Official Channel



POST CODE:538-0052
5-6-34 Yokozutsumi, Tsurumi-ku Osaka, JAPAN
TEL: +81-6-6914-2828 FAX: +81-6-6914-2838

ESK-001E BAA